



## Configuring the RIP

- i** After printing the GJ factory default file, all security unlock codes for the plug-ins will be erased. Therefore when launching the RIP after printing the file you get several error messages. This is normal and is due to the RIP trying to activate the device for which the codes have not been entered. The next step in configuring the RIP is to check that the buffer and memory settings have been configured correctly by the GJ factory default file, then to enter the Security Unlock codes for your devices/plug-ins and to restart the RIP one last time to activate the devices/plug-ins so that all the settings become active.

- Select Navigator -> Configure RIP.

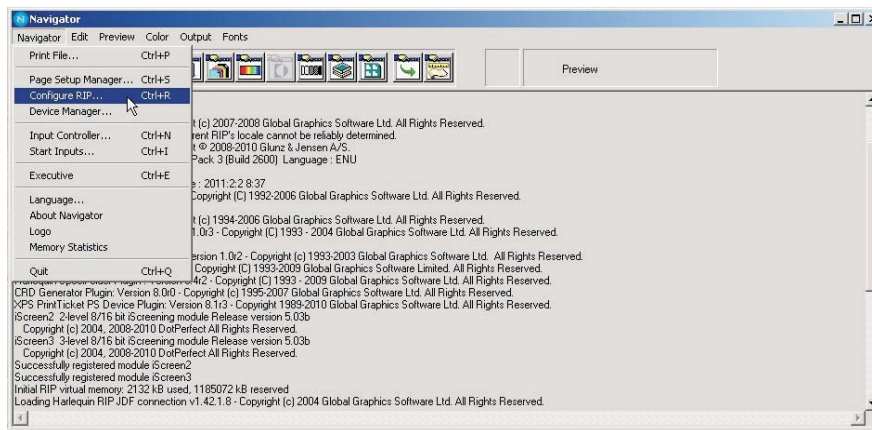


- This opens the Configure RIP dialog.

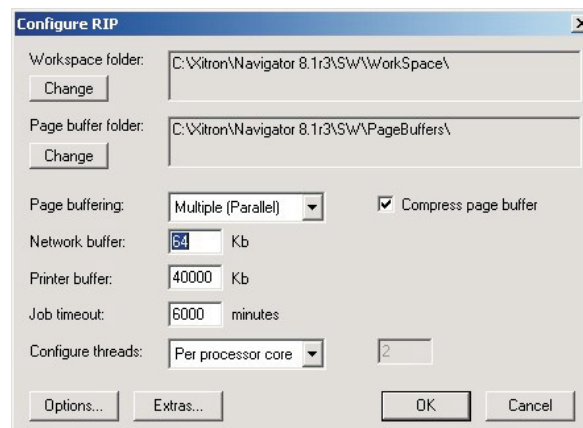

- Set Page buffering to Multiple (Parallel).
- Set Network buffer to 64.
- Set Printer buffer to 40000.
- Click on Options.

- This opens the **Configure RIP Options** dialog.

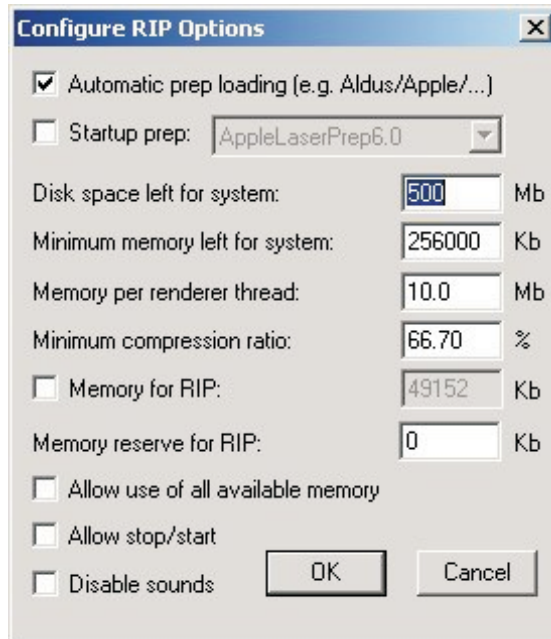

Set **Disk space left for system** to 500.

Set **Minimum memory left for system** to 256,000.

Click on **OK** to return to **Configure RIP** dialog.

Click **Extras...**

