




Remove right side cover to access the magnetic sensor/magnet

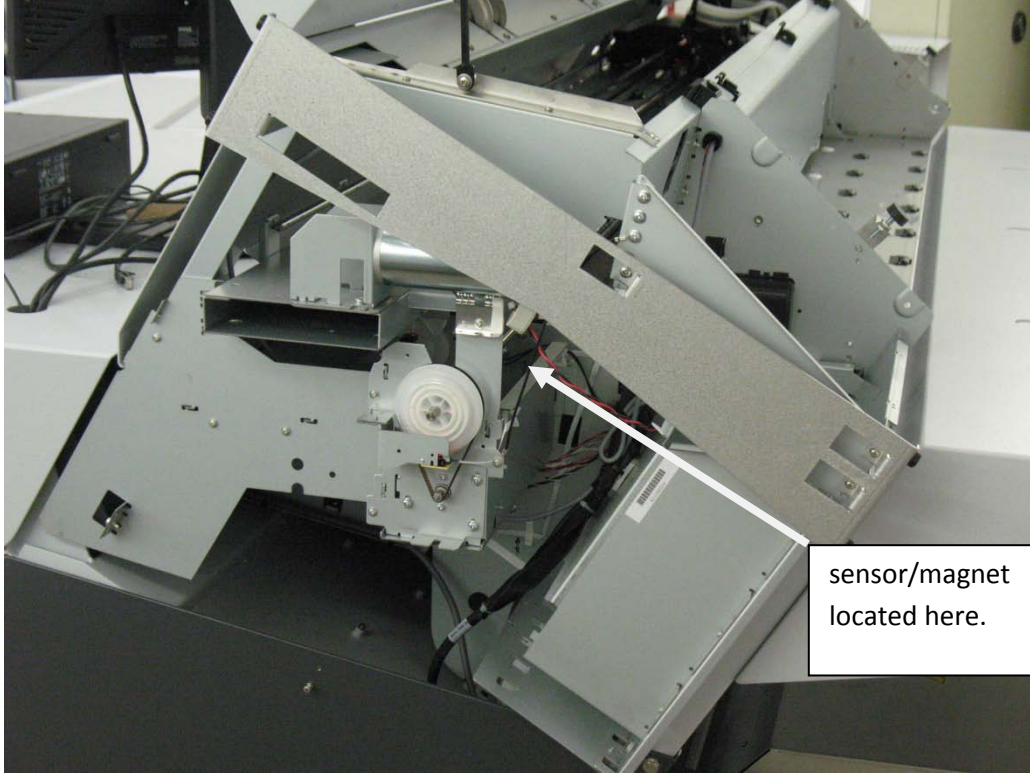

sensor/magnet located here.

