

Removing Left Cover from PW3000

First, remove 3 screws holding black cover.



Power down printer, then unplug it. After it's unplugged, turn the power on to bleed remaining voltage. Once that's done remove control panel by releasing 2 tabs then pull out carefully, and unplug ribbon cable.



Then, remove 2 left cover screws.



Take the ink door off by removing 2 screws.



Remove 3 screws from the bottom.

