



Configuring the RIP

i After printing the GJ Factory default file, all security unlock codes for the plug-ins will be erased. Therefore when launching the RIP after printing the file you will get several error messages. This is normal and is due to the RIP trying to activate the device for which the codes have not been entered. The next step in configuring the RIP is to check that the buffer and memory settings have been configured correctly by the GJ Factory default file, then to enter the Security Unlock codes for your devices/plug-ins and to restart the RIP one last time to activate the devices/plug-ins so that all the settings become active.

- Select Navigator -> Configure RIP.

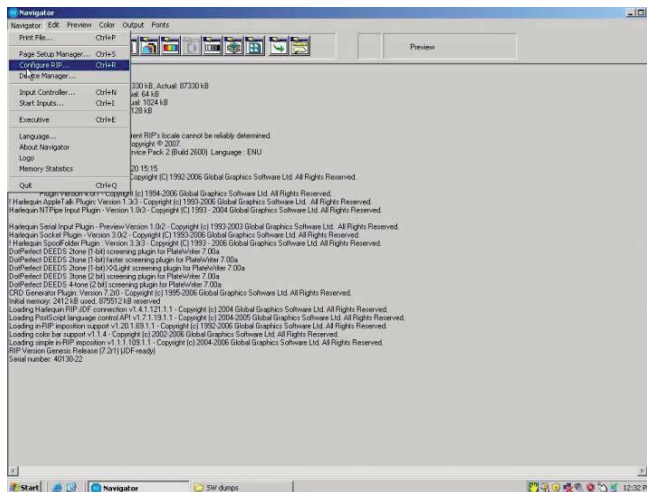


- This opens the Configure RIP dialog.

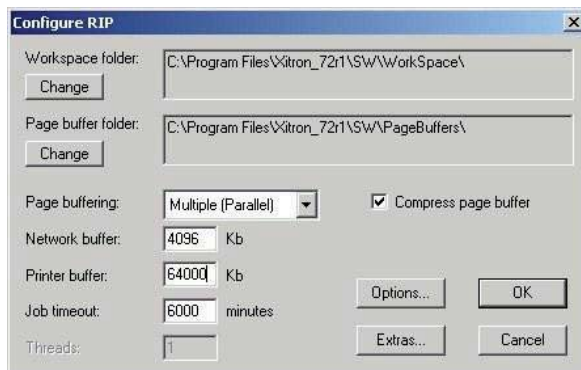


Set **Page buffering** to **Multiple (Parallel)**.
 Set **Network buffer** to **4096**.
 Set **Printer buffer** to **64000**.
 Click on **Options**.

- This opens the **Configure RIP Options** dialog.

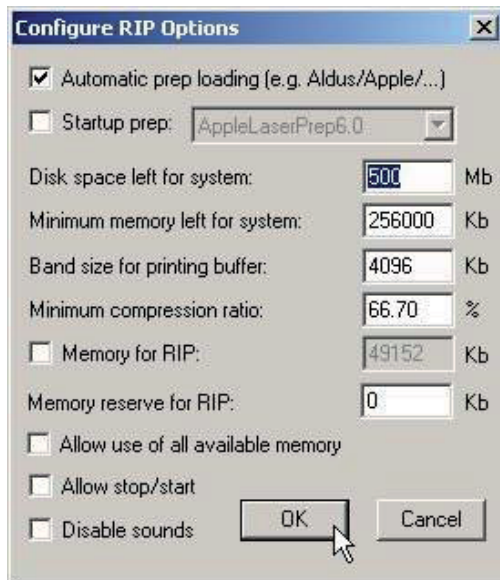


Set **Disk space left for system** to 500.
Set **Minimum memory left for system** to 256,000.
Click on **OK** to return to **Configure RIP** dialog.

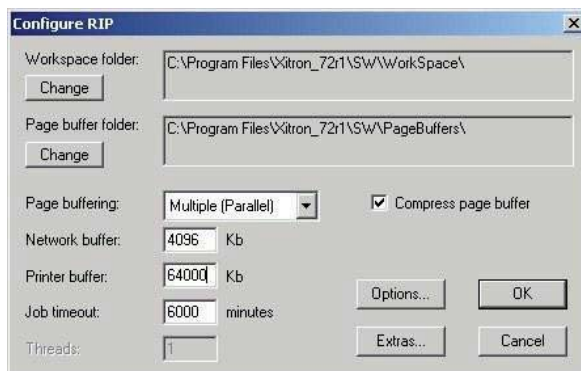

Click **Extras...**

- This opens the **Configure RIP Extras** dialog.

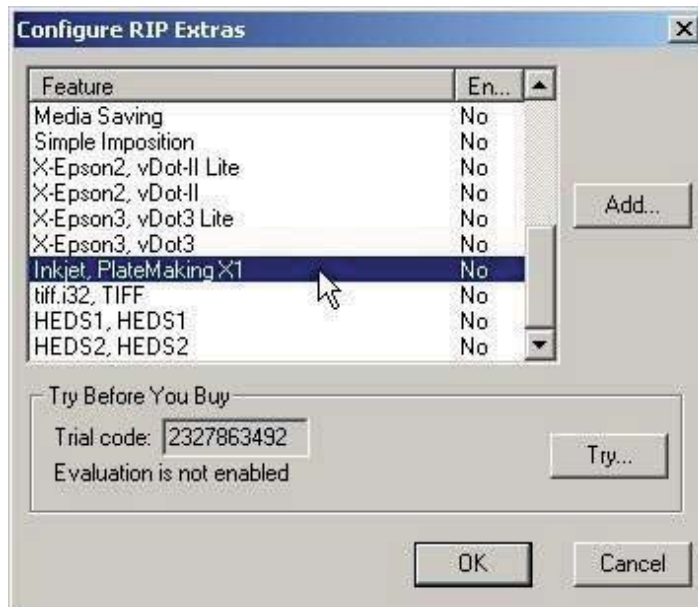

There are a number of passwords supplied with your system, not all are entered here. If you purchased the optional **Proofing** function and **AppleTalk plug-in**, these passwords will be added separately later. For now you will need to enter the passwords for the Inkjet, PlateMakingX1 and for any other devices you purchased unlock codes for.

- Start by selecting the Inkjet, PlateMakingX1 item and click **Add...**



Enter the corresponding password and click **OK**.

Repeat the procedure for any other features/devices you have codes for such as trapping or imposition.

- Finally click **OK** in the **Configure RIP Extras** and the **Configure RIP** dialog boxes to save these changes.
- Select **Navigator -> Quit** to exit the RIP.
- All of the configurations and passwords have been saved.
- Restart the RIP to activate changes and unlock codes.