




## PlateWriter 3000 / NewsWriter Head Cap Maintenance

- 1) Power off printer
- 2) Enter service mode by pushing down the arrow right, arrow down, and enter button, then while holding down the buttons power on printer. Release buttons after it starts up.



Maintenance Kit

- 3) Arrow right to Printer Setup
- 4) Arrow right to maintenance, scroll down to wiper exchange, then arrow right to sequence, then press enter.

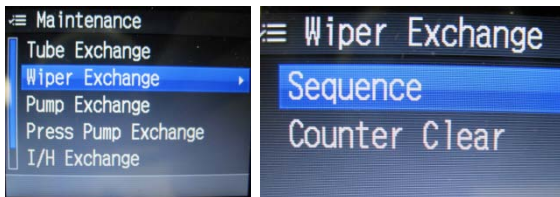

- 5) Open the top cover, and remove access panel, using your maintenance kit clean the wiper blade, and flush pad.



- 6) **With the top cover open**, power down the printer, then the pad will slide back and expose the head caps. Clean the head caps.



- 7) Close the top cover, then power printer on. The print head will then move back to position, and you're done.